



Data Sheet



- **Permits easy monitoring of all input/output signals**
- **Commonly used signals are available through BNC connectors**
- **Integrated battery holder and power supply connection**

The Universal Interface Board can be used with the PLDD-75, PLDD-120, PLDD-150 and PLDD-200-ULW-3. Its purpose is to allow the user convenient access to all the input and output connections.

The UIB-01 comes mounted on a base plate which also accepts any of our drivers. The base plate will bolt to a standard optical bench with 1 inch center to center hole spacing.

OptiSwitch Technology Corporation

 
 
 
 
6355 Nancy Ridge Drive, San Diego, CA 92121

Tel: (858) 452-8787 ◦ Fax: (858) 452-8788

Email: sales@optiswitch.com ◦ Web: <http://www.optiswitch.com>



***Physical Dimensions**

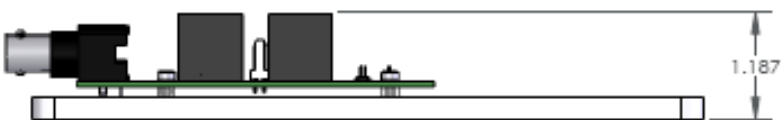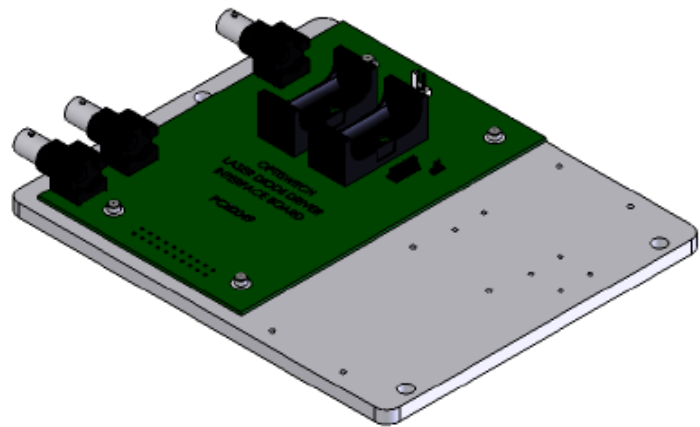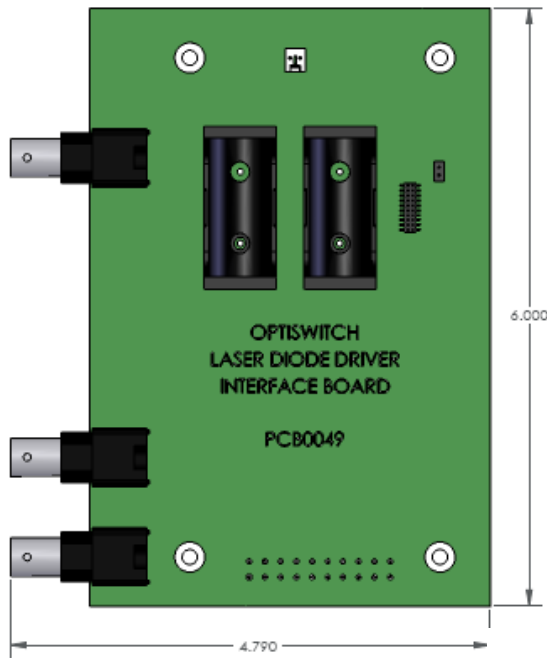

**Dimensions are subject to change without notice.*

OptiSwitch Technology Corporation
6355 Nancy Ridge Drive, San Diego, CA 92121
Tel: (858) 452-8787 ◦ Fax: (858) 452-8788
Email: sales@optiswitch.com ◦ Web: <http://www.optiswitch.com>